




# PW Ladder Tray Adaption to Wire Mesh End to End

## I-tray & CF/ZF CE25 & Self-drilling Screw

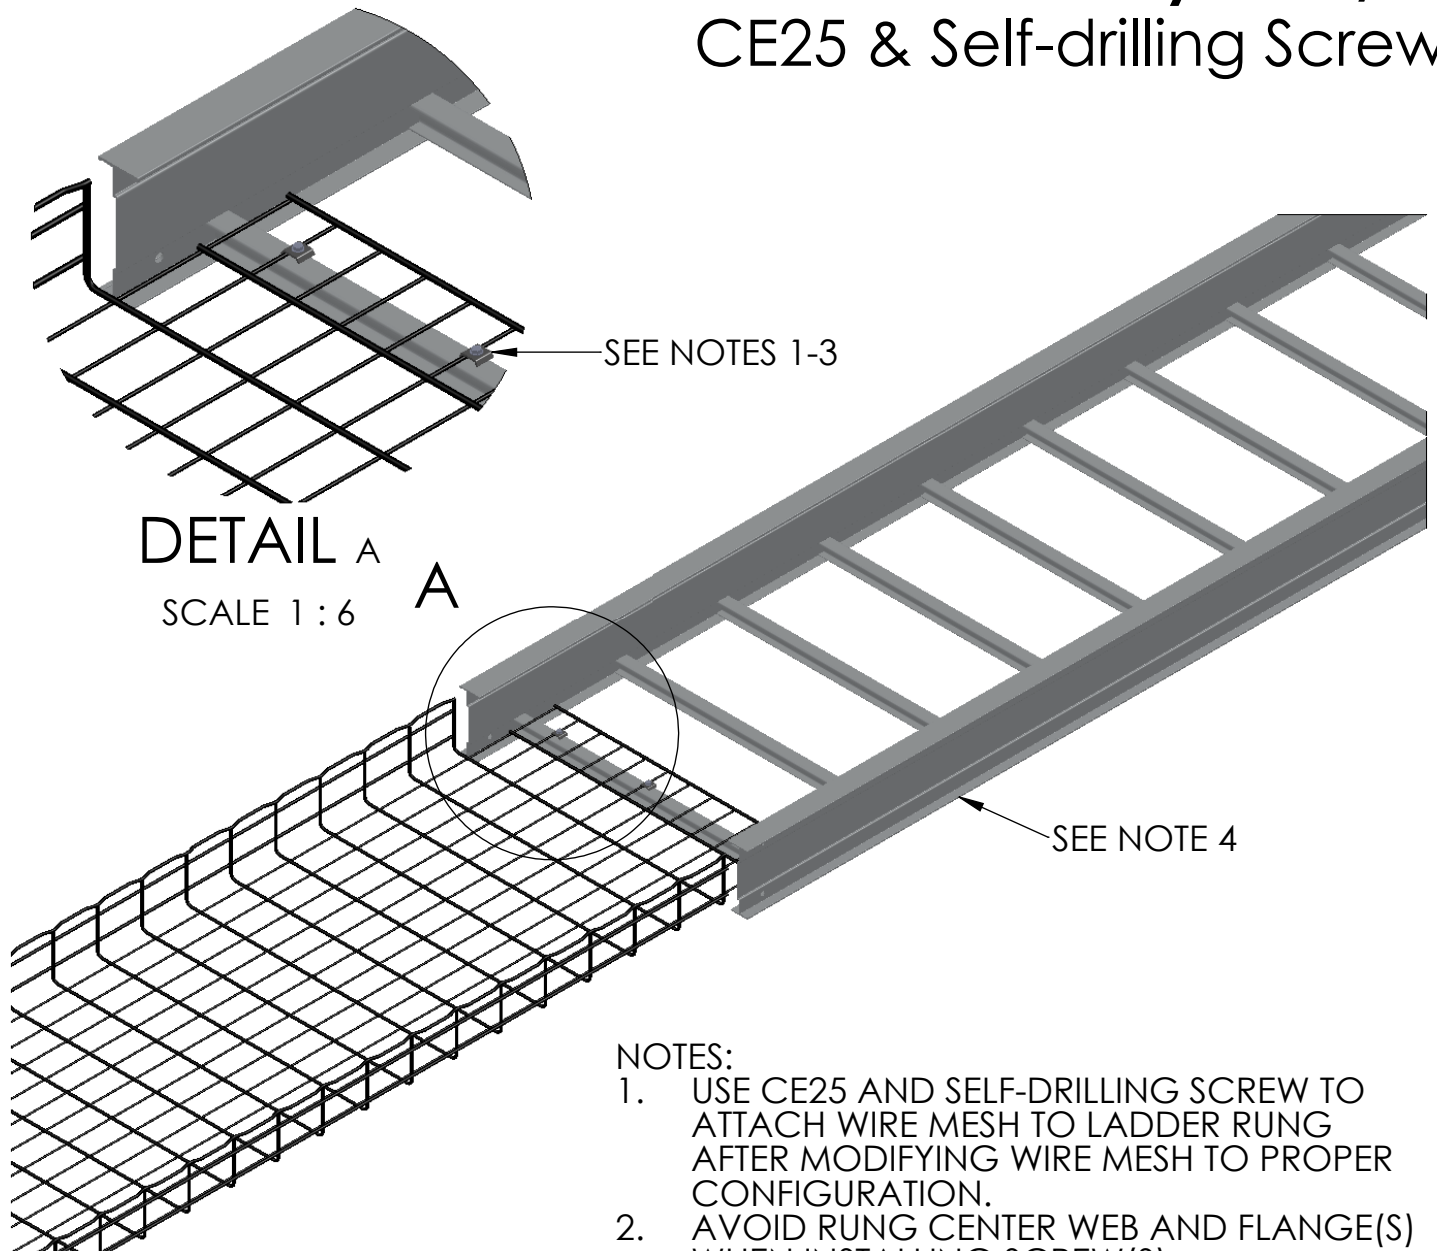

### NOTES:

1. USE CE25 AND SELF-DRILLING SCREW TO ATTACH WIRE MESH TO LADDER RUNG AFTER MODIFYING WIRE MESH TO PROPER CONFIGURATION.
2. AVOID RUNG CENTER WEB AND FLANGE(S) WHEN INSTALLING SCREW(S)
3. USE TWO (2) EACH CE25 AND SCREWS FOR TRAYS UP TO 18" WIDE AND THREE (3) EACH FOR SYSTEMS WIDER THAN 18".
4. SUPPORT END OF LADDER SECTION (ADJACENT WIRE MESH SPLICE AREA) WITHIN 2' OF END OF SPLICE ON LADDER SIDE (not shown).