


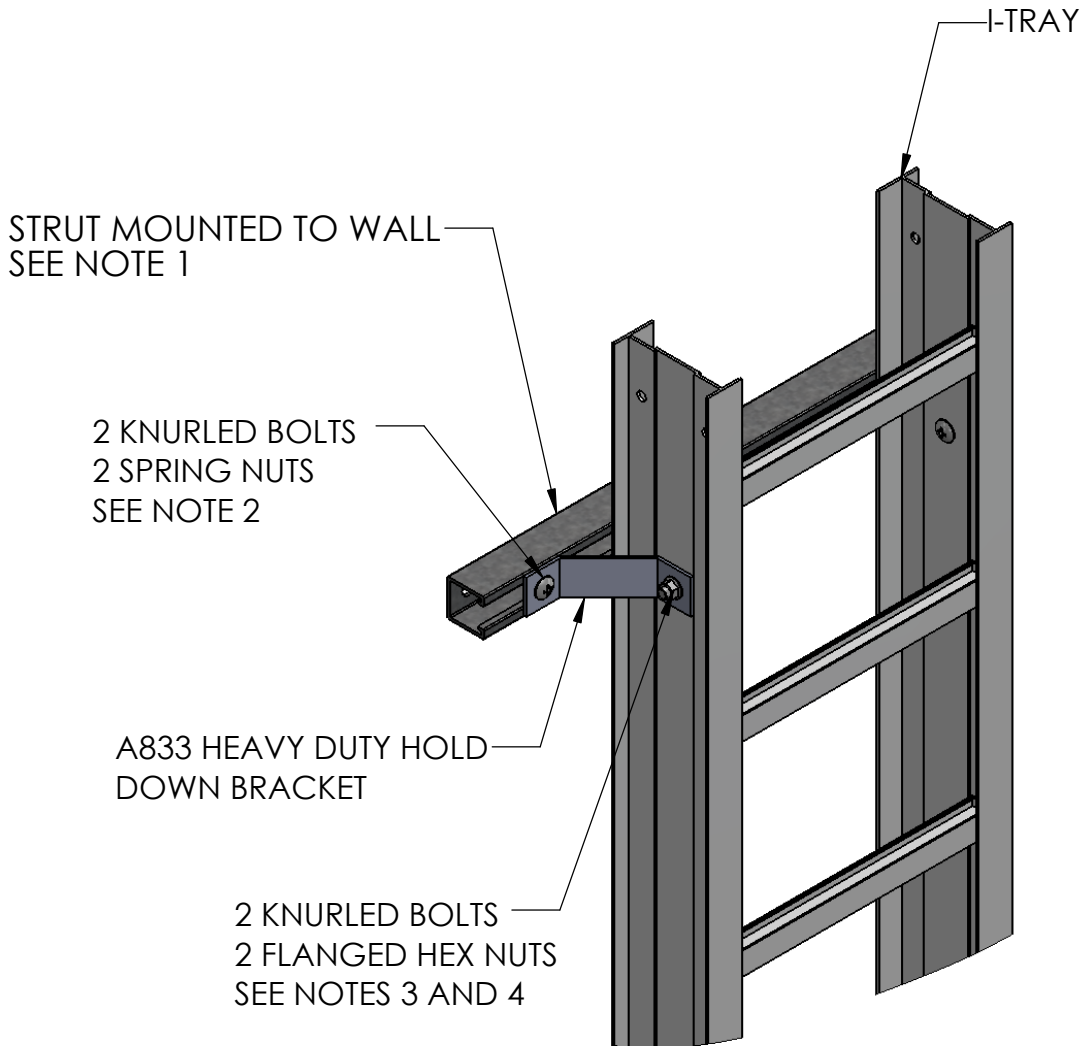

I-TRAY MOUNTED TO WALL WITH A833 HEAVY DUTY HOLD DOWN BRACKETS



NOTES:

1. MOUNT STRUT TO WALL USING 1/2 INCH HARDWARE (NOT INCLUDED WITH KIT).
2. INSTALL HOLD DOWN BRACKET ON STRUT USING 1/2 INCH HARDWARE (NOT INCLUDED WITH KIT).
3. MATCH DRILL HOLES IN I-TRAY FOR HARDWARE.
4. INSTALL 3/8 INCH HARDWARE AS SHOWN (INCLUDED WITH KIT).

"Copyright LNA, Inc. Drawings are proprietary and may not be copied or otherwise duplicated or used without express written permission."

BP1065

Legrand
8319 State Rt. 4
Mascoutah, IL 62258 USA
800-658-4641
618-566-3250
Fax 618-566-4978
www.legrand.us/cablofil