


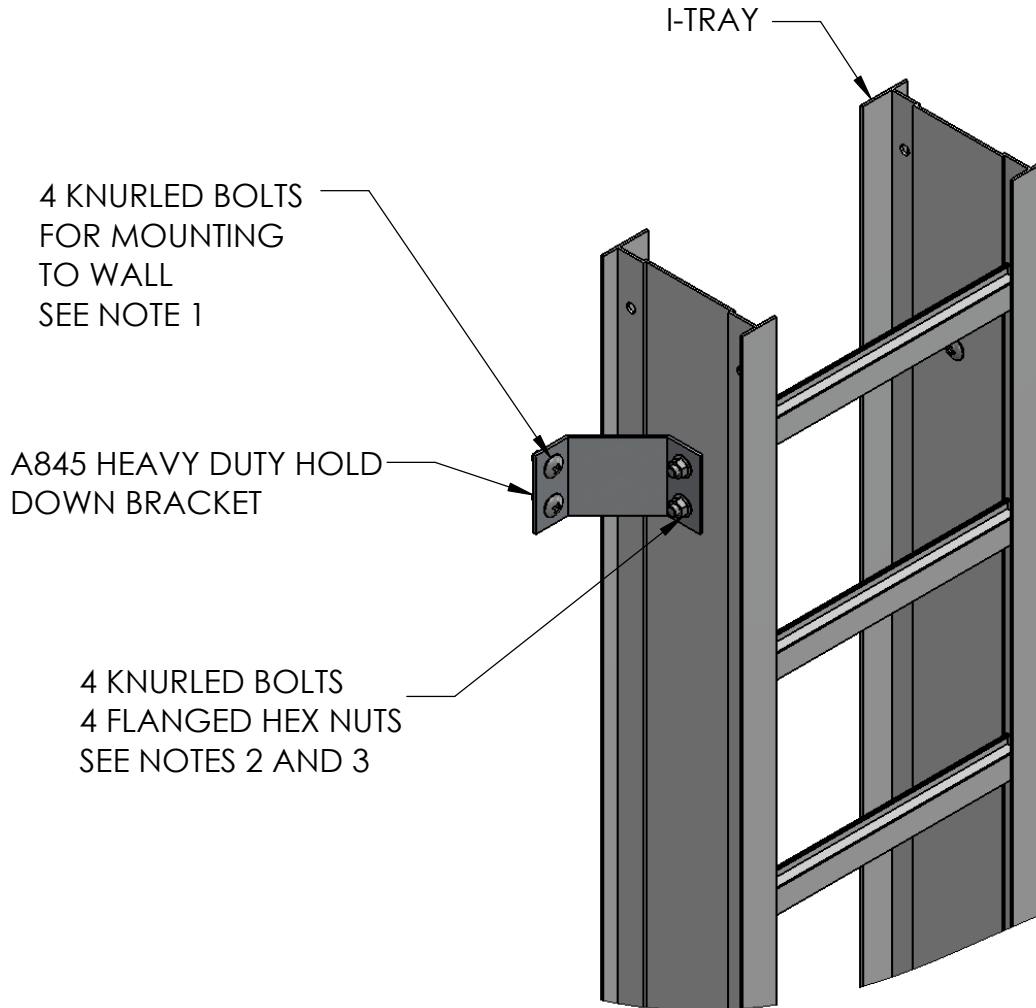

I-TRAY MOUNTED TO WALL WITH HEAVY DUTY HOLD DOWN BRACKET A845



1. POSITION HOLD DOWN BRACKET ON WALL AND MATCH DRILL HOLES FOR 1/2 INCH MOUNTING HARDWARE (NOT INCLUDED WITH KIT).
2. POSITION HOLD DOWN BRACKET ON TRAY AND MATCH DRILL HOLES FOR 3/8 INCH MOUNTING HARDWARE (INCLUDED WITH KIT).
3. INSTALL 3/8 INCH HARDWARE AS SHOWN.

"Copyright LNA, Inc. Drawings are proprietary and may not be copied or otherwise duplicated or used without express written permission."

BP1066

Legrand
8319 State Rt. 4
Mascoutah, IL 62258 USA
800-658-4641
618-566-3250
Fax 618-566-4978
www.legrand.us/cablofil