




WM HORIZONTAL REDUCER FITTING INSTALLATION INSTRUCTIONS

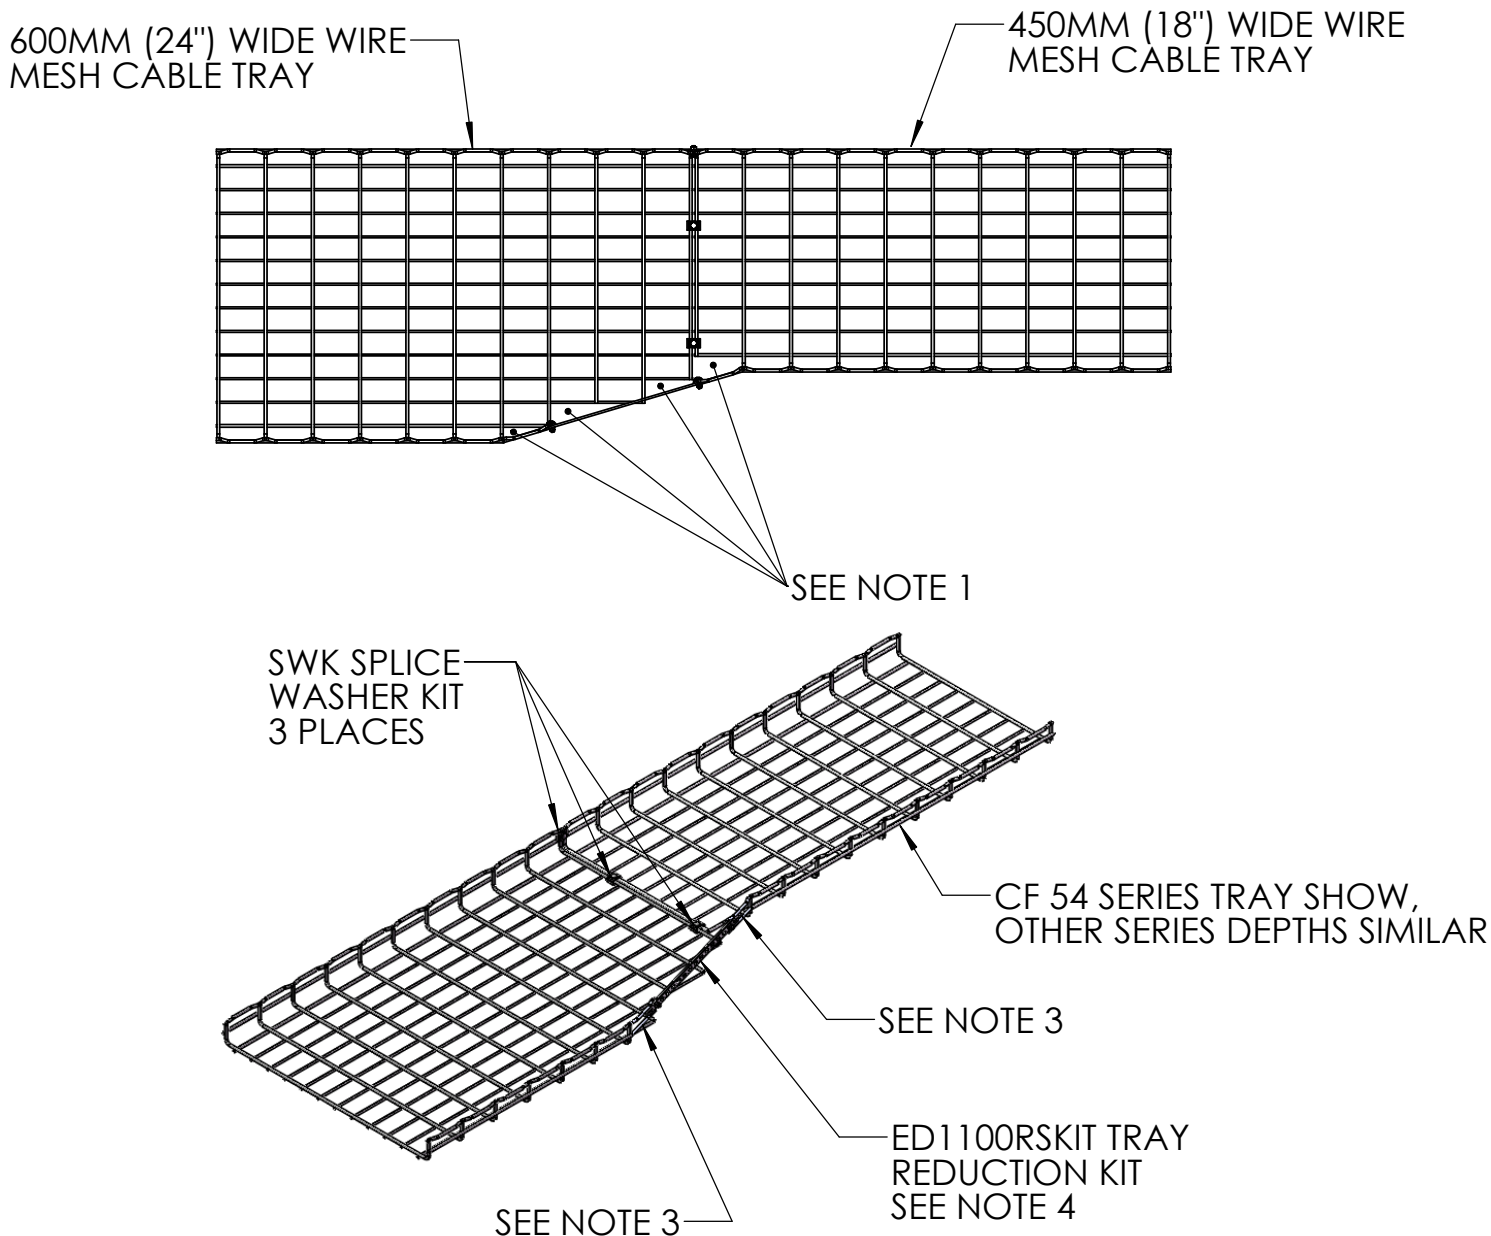

1. REMOVE SECTIONS OF TRAY AS SHOWN.
2. USE SWK TO SPLICE SECTIONS OF TRAY TOGETHER AS SHOWN.
3. FORM TRAY SIDERAIL SECTIONS TO DESIRED ANGLE AS SHOWN.
4. TRIM BRACKET TO REQUIRED LENGTH AND INSTALL ED1100RSKIT AS SHOWN.

"Copyright LNA, Inc. Drawings are proprietary and may not be copied or otherwise duplicated or used without express written permission."

BP1099

Legrand
8319 State Rt. 4
Mascoutah, IL 62258 USA
800-658-4641
618-566-3250
Fax 618-566-4978
www.legrand.us/cablofil