




WIRE MESH CABLE TRAY TO WALL PENETRATION SLEEVE

ORDER **WM2WPSKIT-ZN** or **WM2WPSKIT-S6** FOR KIT CONTAINING ALL HARDWARE NEEDED TO MAKE CONNECTION

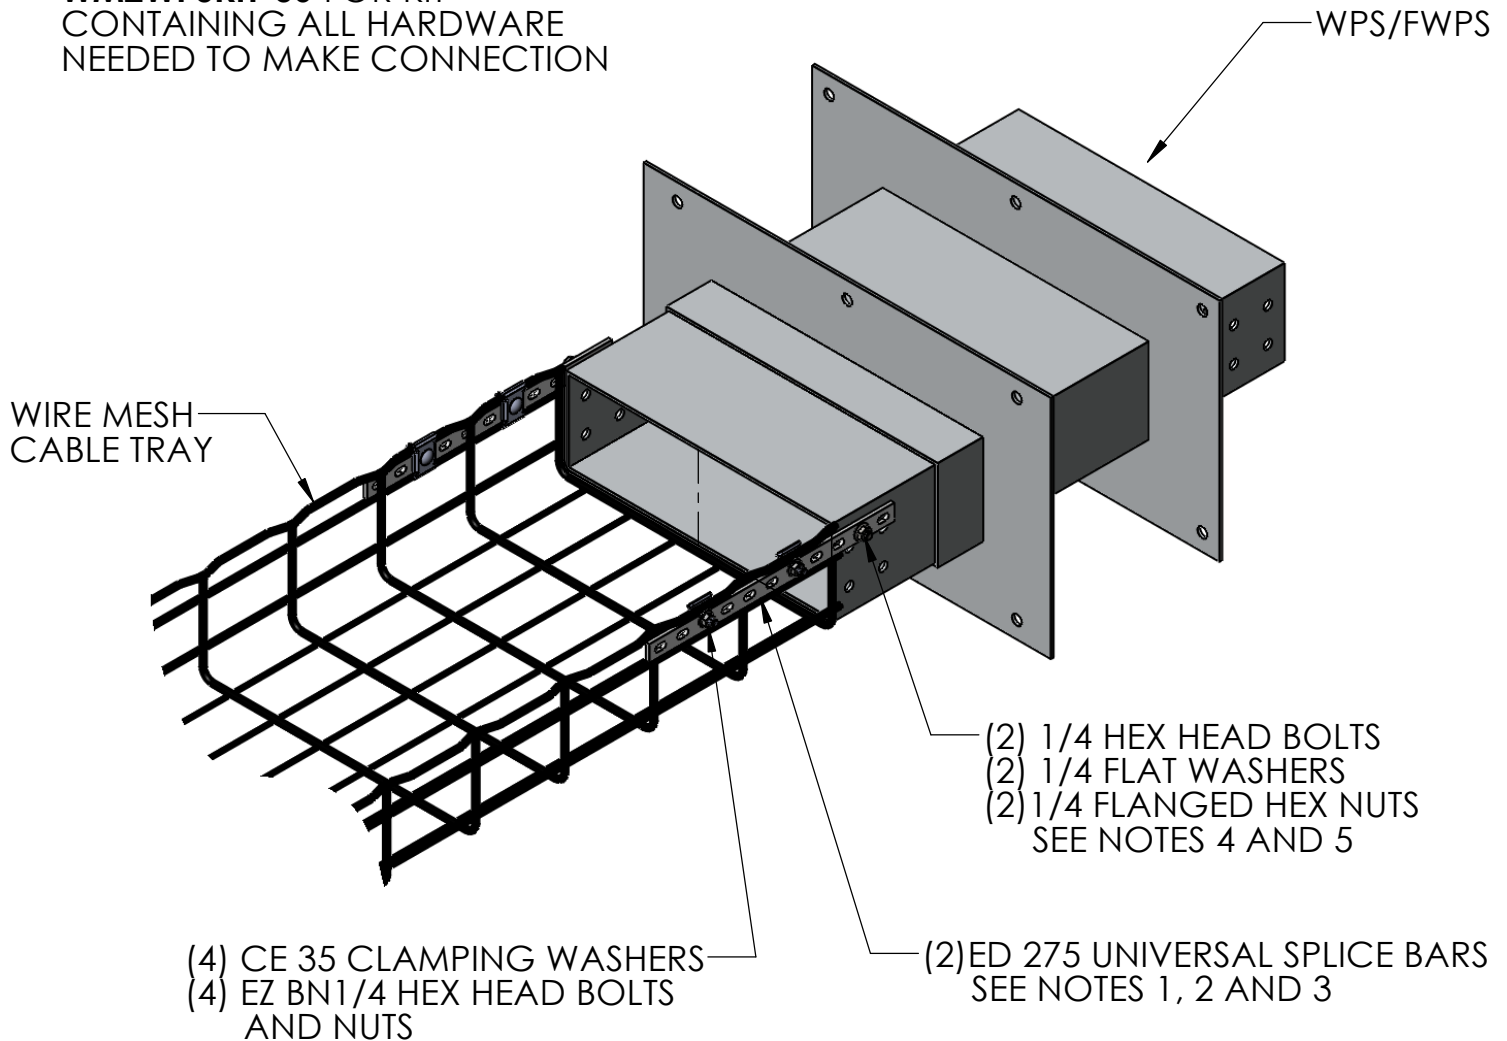

1. POSITION ED 275 UNIVERSAL SPLICE BAR ON WIRE MESH CABLE TRAY AS SHOWN.
2. ATTACH ED 275 TO WIRE MESH CABLE TRAY USING FOUR CE 35 CLAMPING WASHERS AND FOUR EZ BN 1/4 BOLTS AND NUTS AS SHOWN.
3. POSITION WIRE MESH CABLE TRAY WITH ED 275 ATTACHED AND MATCH DRILL A CLEARANCE HOLE IN WPS FOR A 1/4 BOLT.
4. REMOVE ALL DEBRIS FROM WPS AFTER CLEARANCE HOLES ARE DRILLED.
5. ATTACH ED 275 TO WPS WITH 1/4 INCH HEX HEAD BOLTS, FLAT WASHERS AND FLANGED HEX NUTS AS SHOWN.

"Copyright LNA, Inc. Drawings are proprietary and may not be copied or otherwise duplicated or used without express written permission."

BP1100

Legrand
8319 State Rt. 4
Mascoutah, IL 62258 USA
800-658-4641
618-566-3250
Fax 618-566-4978
www.legrand.us/cablofil